

Base station power off

Disarm your system Unplug your Base Station from power by removing the power cable from the bottom of it
Use a Philips head screwdriver to remove the security screw, underneath where ...

